The CH721 FRONT (LOCAL) MOUNT to REMOTE MOUNT Conversion Kit for M5300

1. LOCAL TYPE Tranceiver

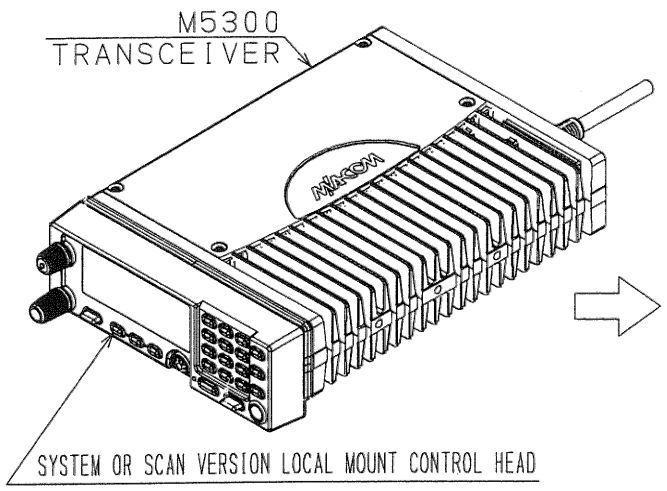

2. Remove CONTROL HEAD

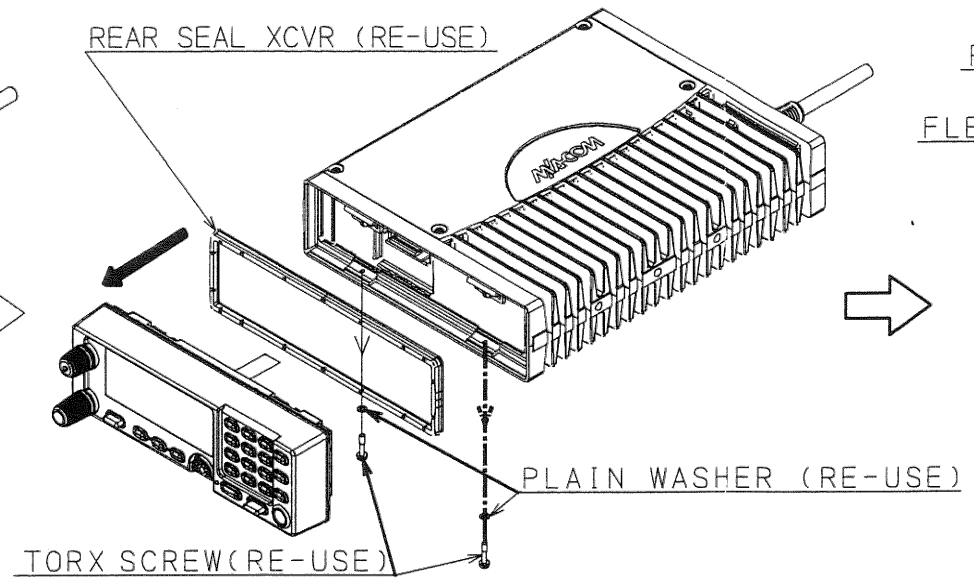

3. Remove REAR HOUSING LOCAL

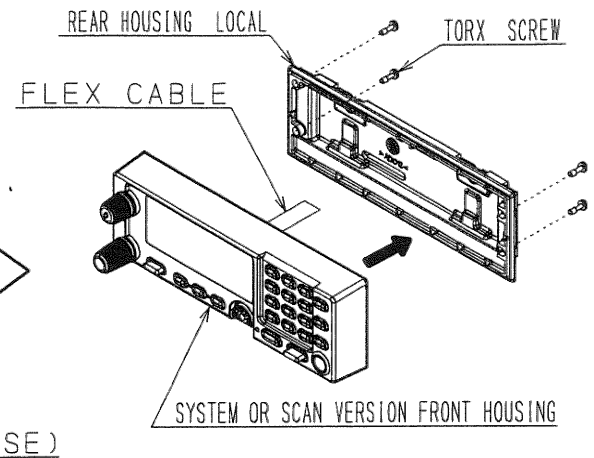

4.Remove FLEX CABLE

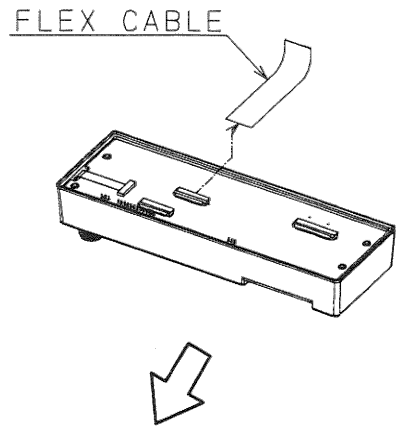

<Build FRONT HOUSING and REAR HOUSING REMOTE>

5.Connection FLEX CABLE

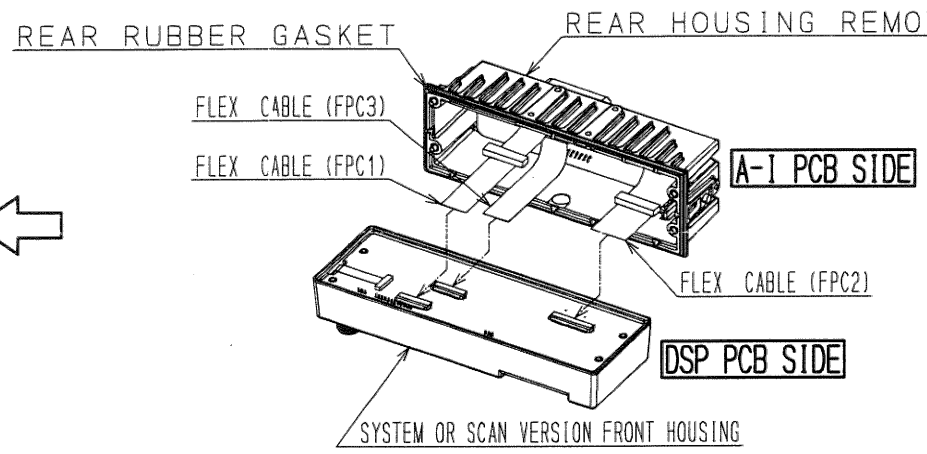

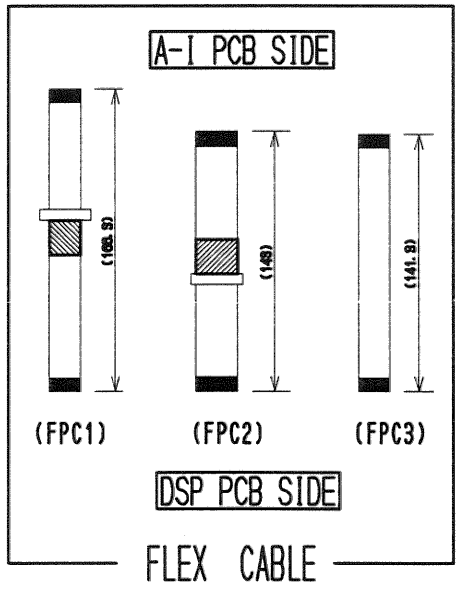

6. Check REAR RUBBER GASKET and tighten screw

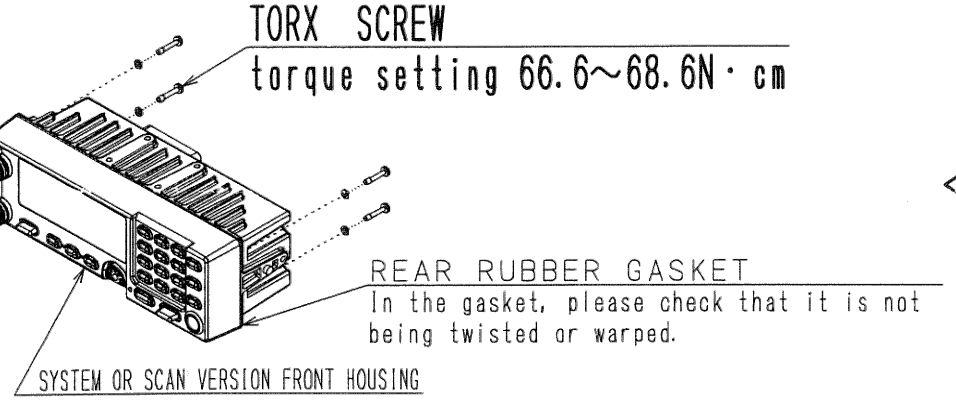
TORX SCREW
torque setting 66.6~68.6N · cm
REAR RUBBER GASKET
In the gasket, please check that it is not being twisted or warped.
SYSTEM OR SCAN VERSION FRONT HOUSING

7. Build FRONT COVER

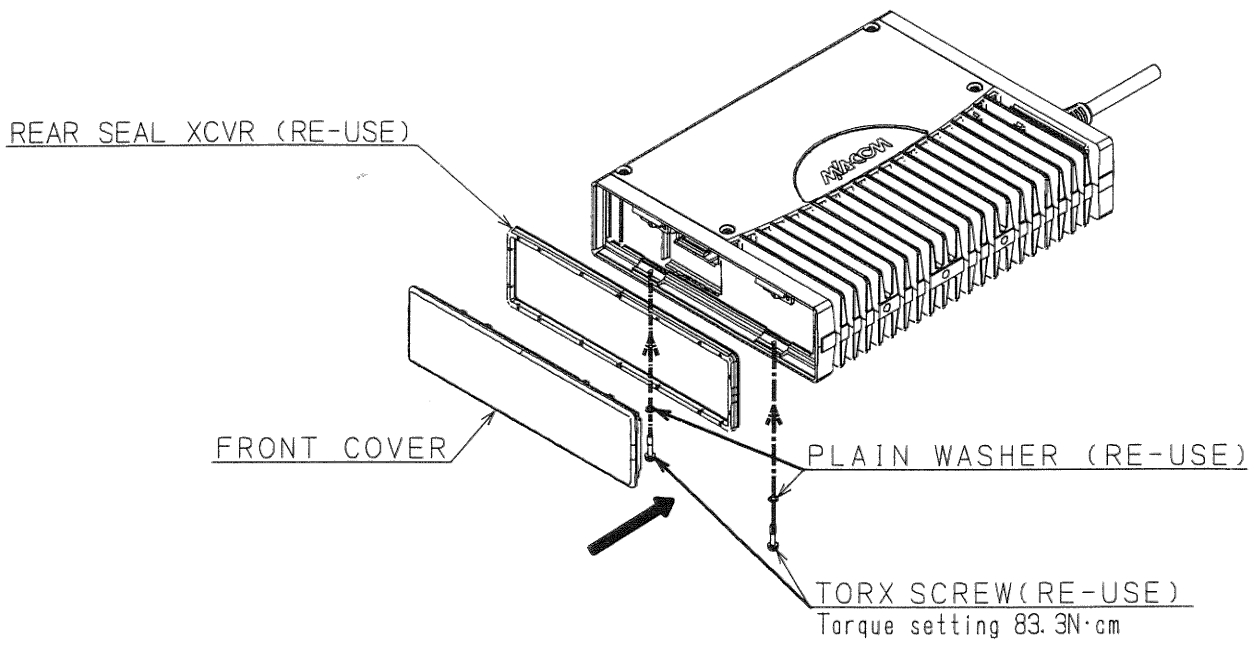

8. Check REAR SEAL XCVR